




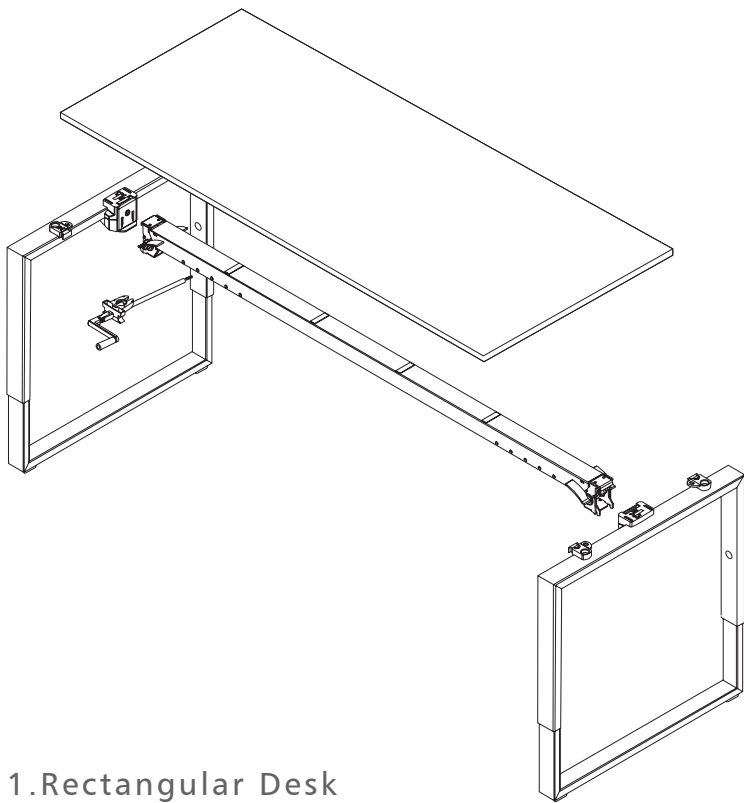

1.Rectangular Desk

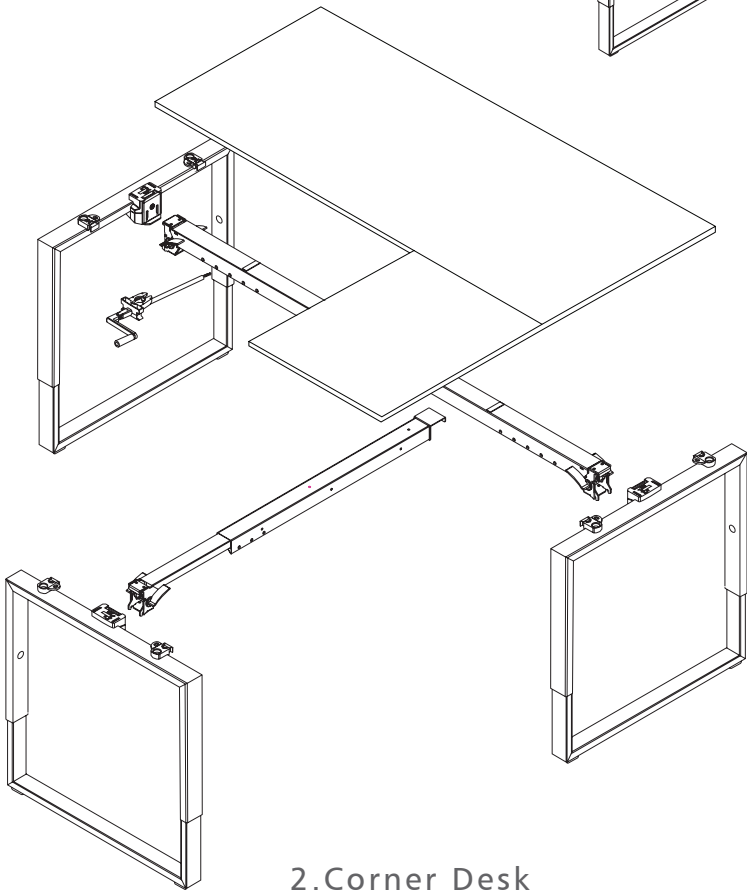


2.Corner Desk

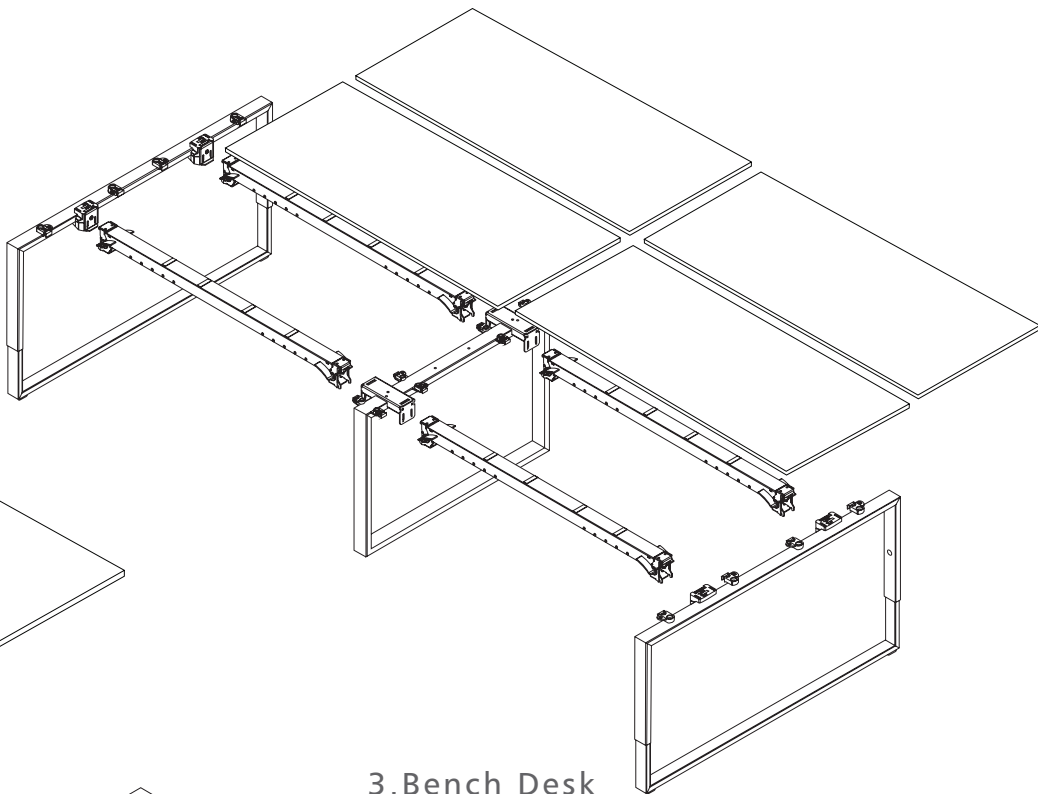


3.Bench Desk


MOx LEGS

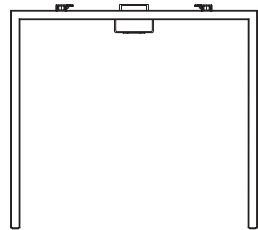


MOx4 Fixed Height

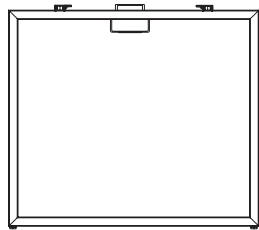


MOxO Fixed Height

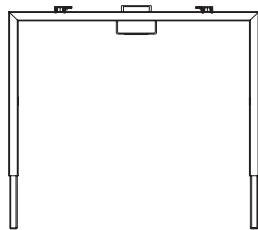


MOx4 HI

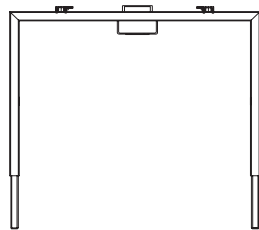


MOx4 Click

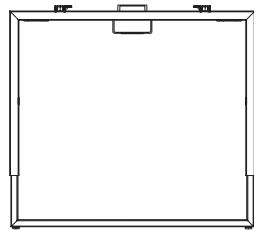

MOxO Click

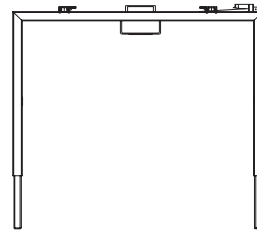


MOx4 HV

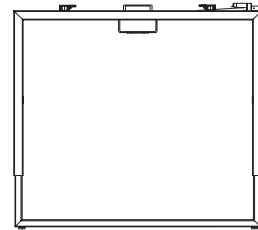


MOxO HV


VERSIONS

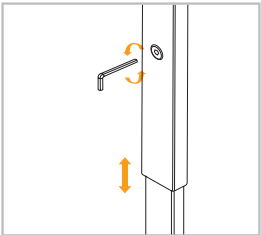

HI version -
via allen key

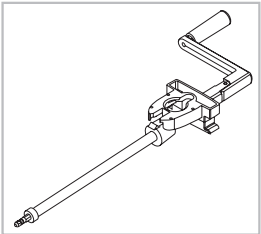


HV version -
via crank handle

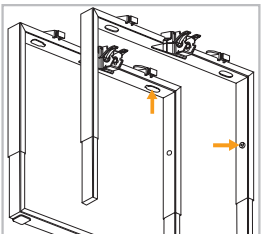


Click


BEAM

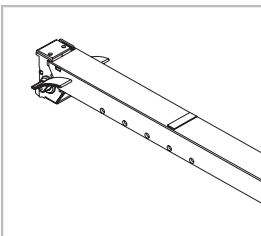


MSA+ Beam

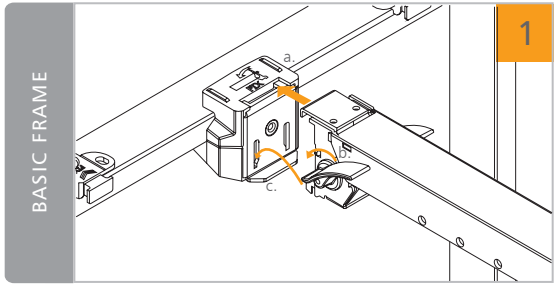


a. Pull out steel plate at the head of the quick beam, b. Turn beam handle counterclockwise, c. Mount quick beam into cover top.

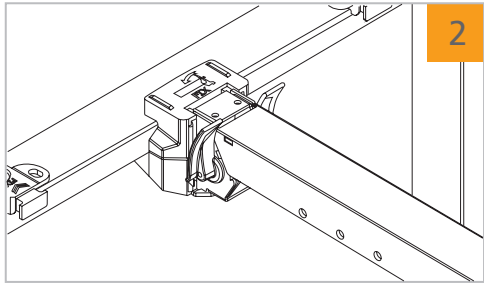


Completed look for step 1.

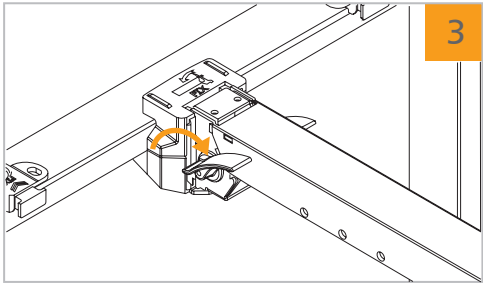


Turn the beam handle clockwise to lock quick beam with cover top.

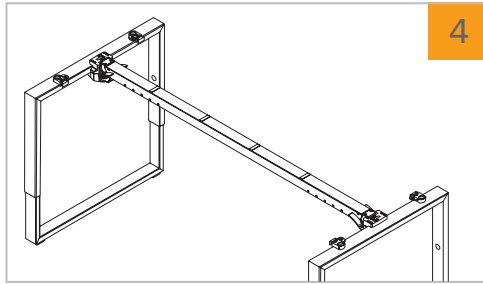


Completed look of basic frame.

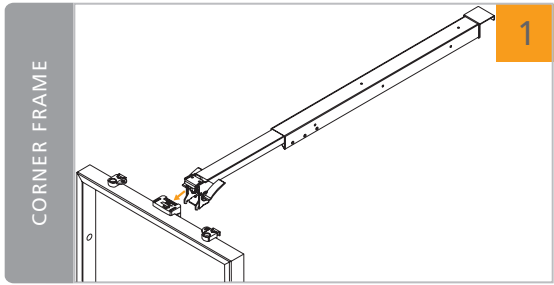


Attach middle leg with flex beam.

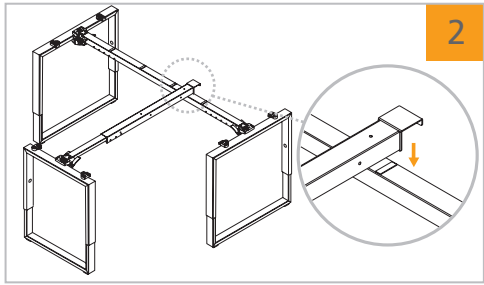


Combine flex beam with the main beam.

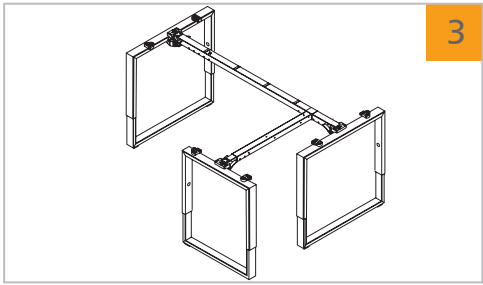


Completed look of corner frame.

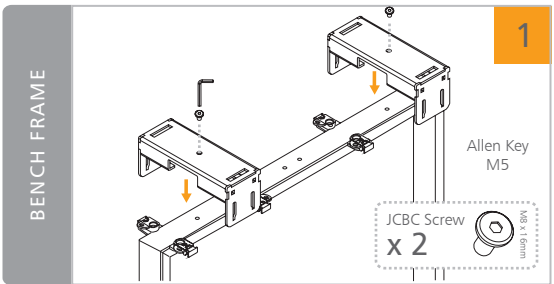


Attach two sided middle bracket to middle leg.

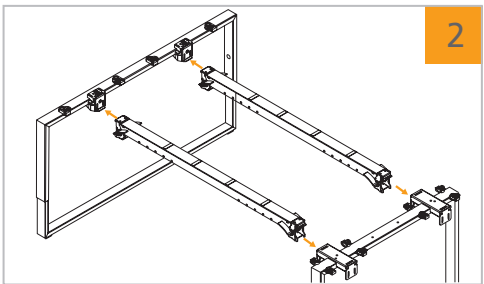


Attach MSA+ beam to the leg frame.

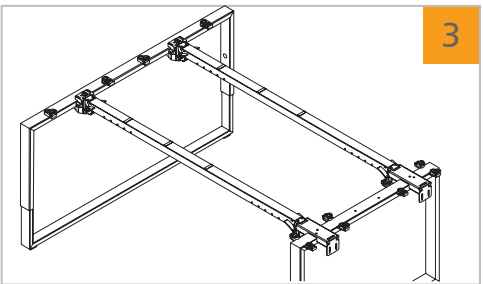


Completed look of bench frame.

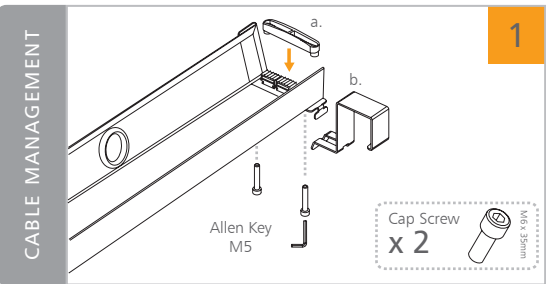


Attach part a and b to the cabletray.

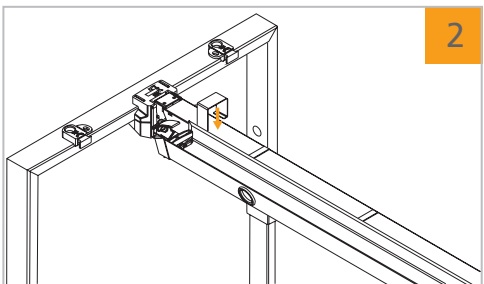


Attach cable tray to the main beam.

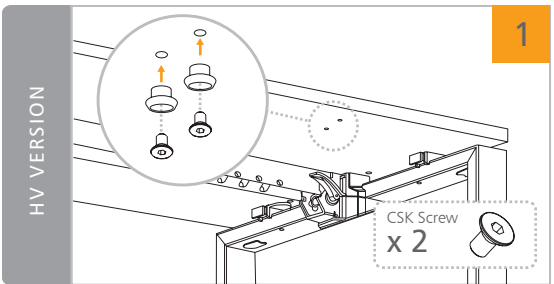


Rectangular (bottom view) - Attach eco fit to worktop by using CSK screws.

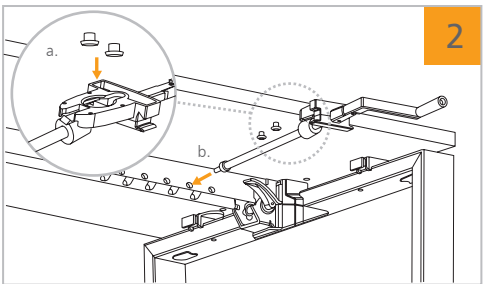


Rectangular (bottom view) - a. Attach crank to the worktop by placing eco fit into crank top, b. Push the crank into the gear box hole.

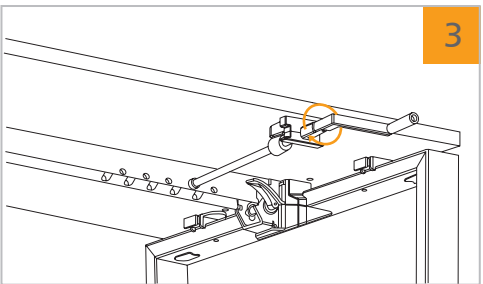


Rectangular (bottom view) - Rotate crank to adjust the high of desk.

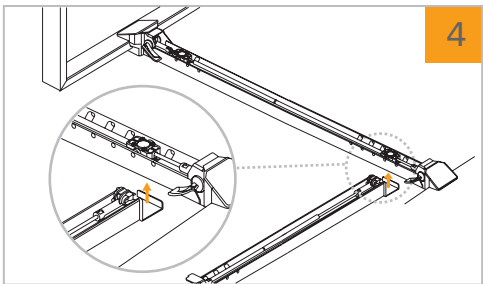


Corner desk (view up-side-down) - Combine flex beam with main beam.

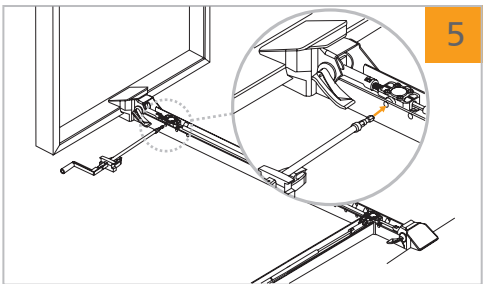


Corner desk (view up-side-down) - repeat step 1 and 2, then push the crank into the gear box hole.

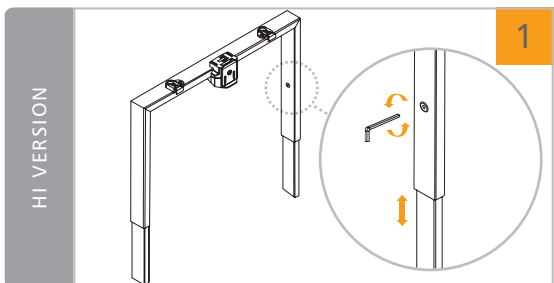


Use allen key to adjust the height of end leg.

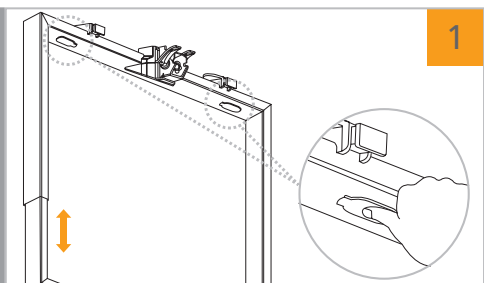


Press the button under the top part of the endleg to adjust the height of end leg.

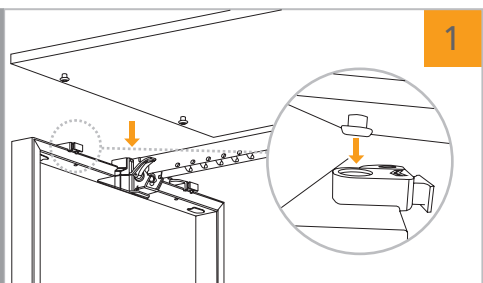

Bottom view - Attach worktop with eco-fits into eco-connector.

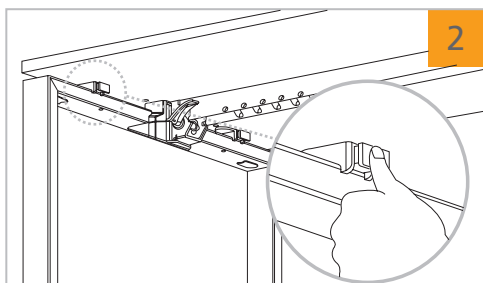

bottom view - Push eco-connector button to lock the worktop.

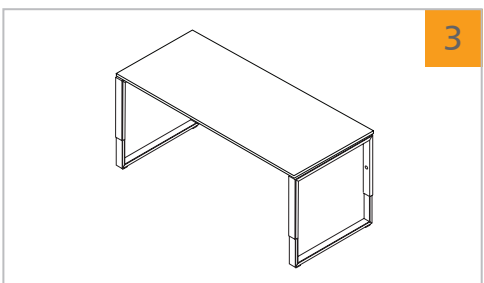

Finish look of rectangular desk.